

## Hubodometer MKP DM100

- 1 Program KM or miles into the Hubodometer
- 2 Program circumference into the Hubodometer

Before you start programming make sure that the hubodometer is in the position as on the picture below!

To start, first you need to program KM or Miles and set the correct tyre circumference into your Hubodometer.

Use the magnet to touch the bezel on top of the display above the word CORPORATION [1]

The LCD display will flash: KM

To change KM in to miles you have to touch with the magnet under the display under the word METER [3]

The LCD display will flash: M

When you do it again it will go back to KM.

Now you need to program the circumference value in the correct millimetres from the tyre.

Use the magnet and touch under the display under HUBO [2] and the LCD will flash:2060.

If you touch it again, the 2 will be flashing and you can change the first digit when you touch with the magnet under the display METER [3]. When you touch it 2 times, it will increase with 2.

When you touch the magnet again under the display HUBO [2] you can change the digits 2/3/4 and you can also increase them when you touch with magnet under the display METER [3]

When you have programmed the 4 digits for the right tyre circumference, than touch with the magnet under the display HUBO [2]

Your HUBODOMETER is programmed and will be ready to use.

The LCD display will show 0,0 KM

If you programmed Miles the LCD will show 0,0M

